


Quick start guide


1. Heater controls

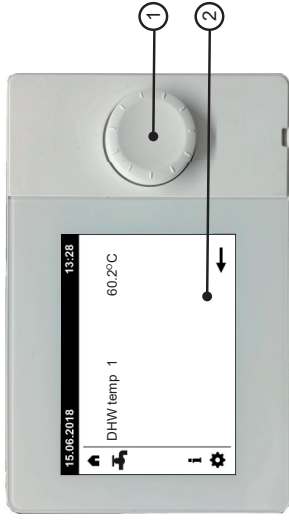


① Control selection (push to enter) ② Display

2. Setting heater time & date

1. Rotate ① until the settings tab is highlighted

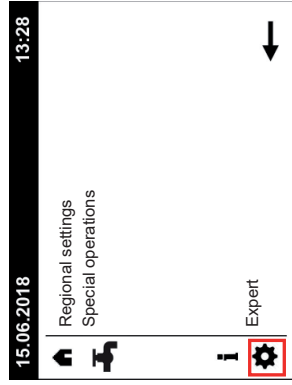


2. Press enter (push ① inwards to enter menu)

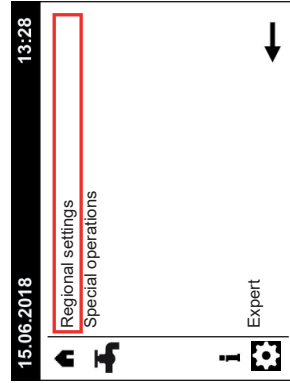

3. Rotate ① and select "Regional settings". Push ① to enter

2. Setting heater time & date (continued)


1. Page "(1/3)" should already be preselected

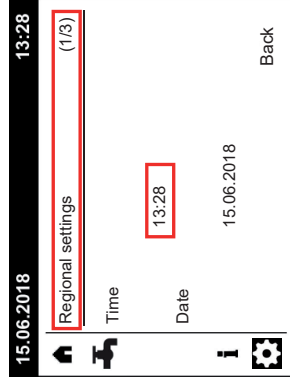

2. Rotate ① to select the time field value and push ① to start setting the time

3. Rotate ① and enter a new hour value then push ① to enter

4. Rotate ① and enter a new minute value

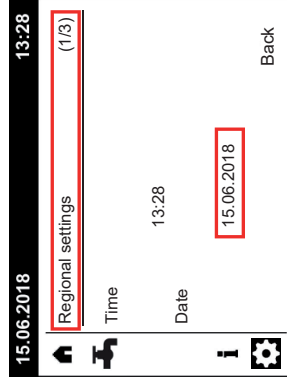

5. Rotate ① to select the date field and push ① to enter

6. Rotate ① and enter a new date, month and year value

7. Rotate ① for additional regional settings or exit regional settings with "Back".


8. It is also possible to adjust the dates set for the start and end of summer time, for the purposes of automatic clock adjustment

3. Returning to the "Home" screen


Pressing and holding ① for more than 3 seconds, will return the user to the "Home" screen

4. Setting DHW operation times


1. From the "Home" screen, rotate ① to select the Domestic Hot Water (DHW) tab

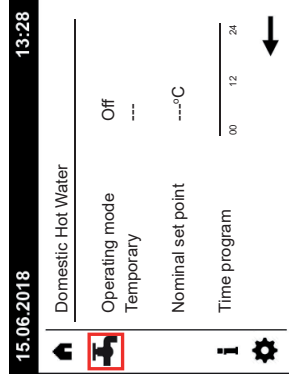

2. Push ① to enter the Domestic Hot Water page

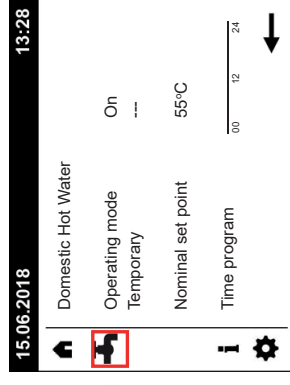

3. Rotate ① until the time program field is highlighted

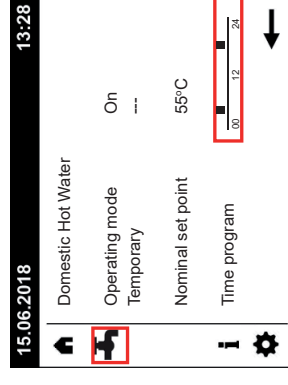


4. Push ① to access the time clock setting page


Quick start guide

4. Setting DHW operation times (continued)


- Push **1** to enter a day of the week to change the times.

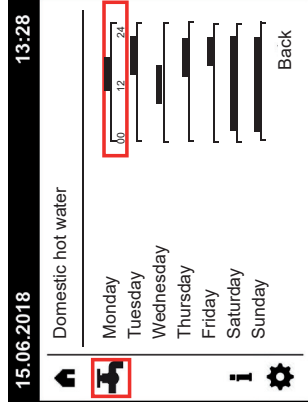

- Rotate and enter using **1** to set the start and end times of the program. Scroll to the beginning (00 hours) to insert another time band (up to a maximum of 3 time bands per day).

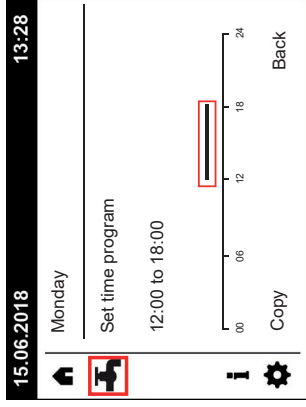


- To delete a time band, rotate and push **1** to move the start and end times of the band to be the same then push **1**.
- Time settings from any day can be copied and applied to other days in the weekly schedule. Move **1** until "Copy" is highlighted. Push **1** to copy this time program.

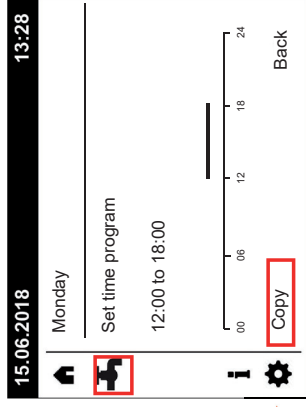


4. Setting DHW operation times (continued)

- Use **1** to select where the previously selected time schedule will be copied and push to copy. Repeat this operation as required.

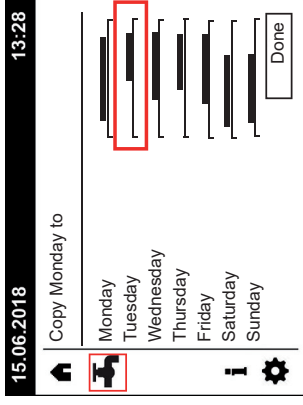


- Select and enter "Done" to return to the Domestic hot water page.

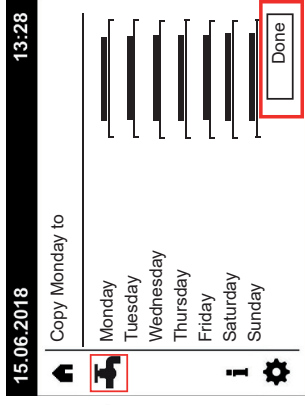

5. Setting DHW temperature

- Using **1** select the DHW tab and highlight the "Nominal set point" field and push **1** to select value.

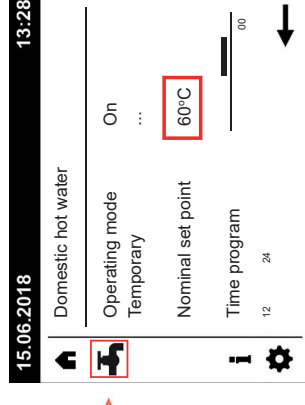


- Set the value by rotating and pushing **1** to confirm setpoint.


6. Temporary DHW operation

Outside of the programmed operation times for water heating, DHW can be quickly turned ON for a single occasion. Once the DHW tank set point has been reached, heating operation will stop and the heater resumes normal operation using pre-programmed time clock settings.

- Use **1** to select and enter the Domestic hot water page. Highlight the "Temporary" field using **1**.

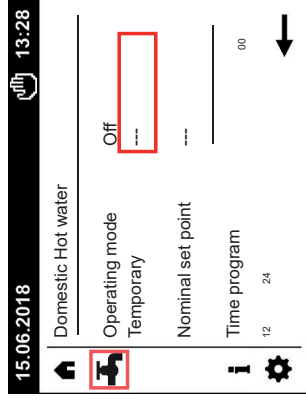

- Enter the "Temporary" field and rotate **1** to select "Recharging". Push **1** to start temporary DHW operation.

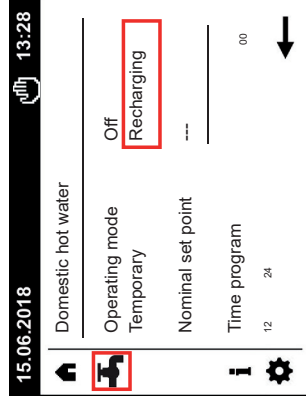

- Heater operation is now active and will recharge the DHW tank to the nominal setpoint.

NB: It is not possible to view or change the DHW Nominal set point once temporary operation has been started and DHW operation mode is OFF. To view the current setpoint, turn the operation mode back to ON temporarily to view the setpoint.

Once temporary charging ("DHW Push" function) has been started it can only be stopped by changing the Operation mode from OFF to ON and back to OFF again (wait 10 seconds between each operation mode change). The appliance should stop within 60 seconds.