

GAS WATER HEATER
WH42, LWH42, WH56, LWH56 (Internal)
WHX42, LWHX42, WHX56, LWHX56 (External)



Please read and understand these instructions before commencing installation and leave this manual with the customer for future reference.

Andrews. Built to perform.



Owner's Guide

Model WH56, LWH56, WHX56, LWHX56
WH42, LWH42, WHX42, LWHX42

WARNING: If the information in this manual is not followed exactly, a fire or explosion may result causing property damage, personal injury or death.

- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.
- **WHAT TO DO IF YOU SMELL GAS**
 - Do not try to light any appliance.
 - Do not touch any electrical switch; do not use any phone in your building.
 - Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
 - If you cannot reach your gas supplier, call the fire department.
- Installation and service must be performed by a qualified installer, service agency or the gas supplier.

Thank you for purchasing this Andrews Water Heaters Gas Water Heater. Before using, please: Read this manual completely for correct installation and operation instructions. Keep this manual where it can be found whenever necessary.

AGENT : ANDREWS WATER HEATERS

Innovation House 3 Oaklands Business Centre Oaklands Park Wokingham Berkshire RG41 2FD, UK

PRODUCT : NORITZ Corporation

5, Minamifutami, Futami-cho, Akashi, Hyogo, Japan

Contents

Contents	2
Owner's Guide	
Important Safety Information.....	3
General Parts	
Main Unit.....	7
Names and Functions of Each Parts	8
Initial Operation	9
How to Use	
When using RC-7508M	
Clock Adjustment	10
Running Hot Water	11
Setting Hot Water Temperature	12
Filling Up the Bath	14
Confirmation Beeper On/Off	15
Other Setting Options	16
Preventing Damage from Freezing	18
When Unused for an Extended Period	19
Regular Maintenance.....	21
Troubleshooting	23
Follow-up Service	27
Specifications	28




Important Safety Information-1

To prevent damage to property and injury to the user, the icons shown below will be used to warn of varying levels of danger.




Every indication is critical to the safe operation of the water heater and must be understood and observed.

Potential dangers from accidents during installation and use are divided into the following three categories. Closely observe these warnings; they are critical to your safety.

Icons warning of risk level

	Danger	Denotes content that may result in instantaneous fire, serious injury and even death when ignored.
	Warning	Denotes content that may result in fire, serious injury and even death when ignored.
	Caution	Denotes content that may result in bodily injury and physical damage when ignored.
Remarks		The content following this icon is necessary to understand for safe and easy use of this water heater.

Other icons

	Electric Shock.		High Temperature.		Be sure to do.		Earth		
	Prohibited		No flame.		Don't touch.		Don't disassemble the equipment.		Don't touch with a wet hand.

Danger




If you detect a gas leak:

1. Do not try to light any appliance
2. Do not touch any electrical switch; do not use any phone in your building.
3. Immediately call your gas supplier from a neighbor's phone. Follow the gas supplier's instructions.
4. If you cannot reach your gas supplier, call the fire department.




[Internal installation]

Do not use the water heater if the intake/exhaust pipe is displaced, has holes, or is corroded.

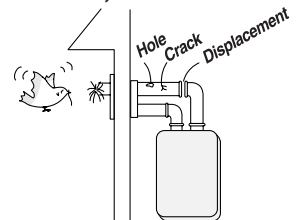

[External installation]

Do not install indoors.

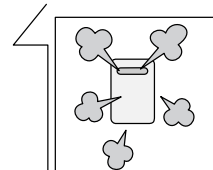

Internal installation

Important Safety Information-2

Warning



If you detect abnormal combustion or abnormal odors, or during an earthquake, tornado or fire:


1. Turn off the hot water supply
2. Turn off the power to the water heater
3. Turn off gas and water at the main
4. Consult the nearest Andrews Water Heaters agent



Check the temperature of the running hot water before entering the shower.



Check the temperature before stepping into the bath tub.

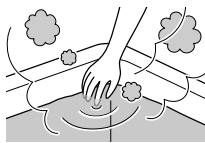

Do not turn off the water heater or change the water temperature while someone is using.



Be sure the gas/power supplied matches the gas on the rating plate.



Do not place or use a spray can near the heater or the exhaust vent terminal.



Do not allow small children to play unsupervised in the bathroom. Do not allow small children to bathe unsupervised.




Contact a qualified service technician for any necessary repairs, service or maintenance.



Contact Andrews Water Heaters before using with a solar pre-heater.



Do not place combustibles such as laundry, newspapers, oils etc. near the heater or the exhaust vent terminal.

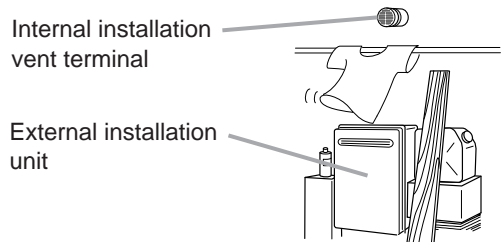


Do not use combustible chemicals such as oil, gasoline, benzene etc. in the vicinity of the heater or the exhaust vent terminal.




Leave the proper clearance between the water heater and nearby objects (trees, timber, boxes with flammable materials etc.).

[Internal installation]

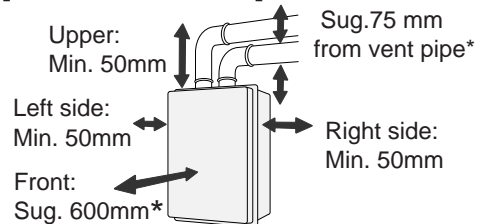

[External installation]

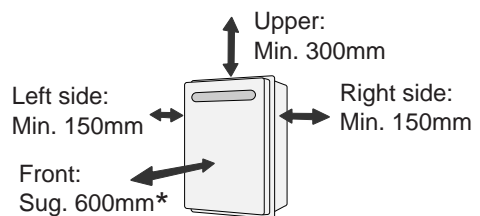

* Indicates suggested clearances for maintenance.

Caution



Be sure to electrically ground the unit.



Do not touch the power cord with wet hands.



Keep power cord free of dust.



Do not use a broken or modified power cord. Do not bind, bend or stretch power cords. Do not scratch, modify, or subject them to impact or force.



Do not use the water heater for other than hot water supply, shower and bath.



Do not use hair spray or spray detergent in the vicinity of the heater.




Do not touch the exhaust vent pipe during or immediately after operation of the water heater.

[Internal installation]



[External installation]

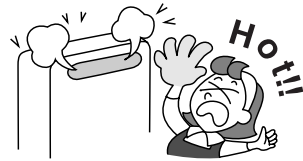

If this unit will be installed in a salon or other location where hair spray or aerosols will be used, locate the unit away from where these products are used.



Do not install in locations where excessive dust or debris will be in the air.

Important Safety Information-3

Remark

Do not drink water that has been inside the unit for an extended period of time. Do not drink the first use of hot water from the unit in the morning.

Clean the filter on the water inlet as frequently as required by the quality of your local water.

Keep the area around the unit clean.

If boxes, weeds, cobwebs, cockroaches etc. are in the vicinity of the unit, damage or fire can result.

Do not install the equipment where the exhaust will blow on walls or windows.

Treat hard, acidic or otherwise impure supply water with approved methods to ensure full warranty coverage.

Problems resulting from scale formation are not covered by the warranty.

Check ignition during use and extinction after use.

This unit is only approved for installation up to 1300m. above sea level.

Do not use parts other than those specified for this equipment.

Do not disassemble the remote controller.

Do not use benzene, oil or fat detergents to clean the remote controller.

This may cause deformation.

Do not get the remote controller wet.

Although it is water resistant, too much water can cause damage.

Do not splash water on the remote controller. Do not expose the remote controller to steam.

Do not locate the remote controller near stoves or ovens, this may cause damage or failure.


If the mains electricity and gas are to be turned off for any long periods during severe weather, it is recommended that the whole system, including the boiler, should be drained to avoid the risk of freezing.

If it is snowing, check the exhaust gas vent and exhaust vent terminal for blockage.


General Parts

Main Unit

Internal Wall Mounted, Power Vent/Sealed Model
WH56, LWH56, WH42, LWH42

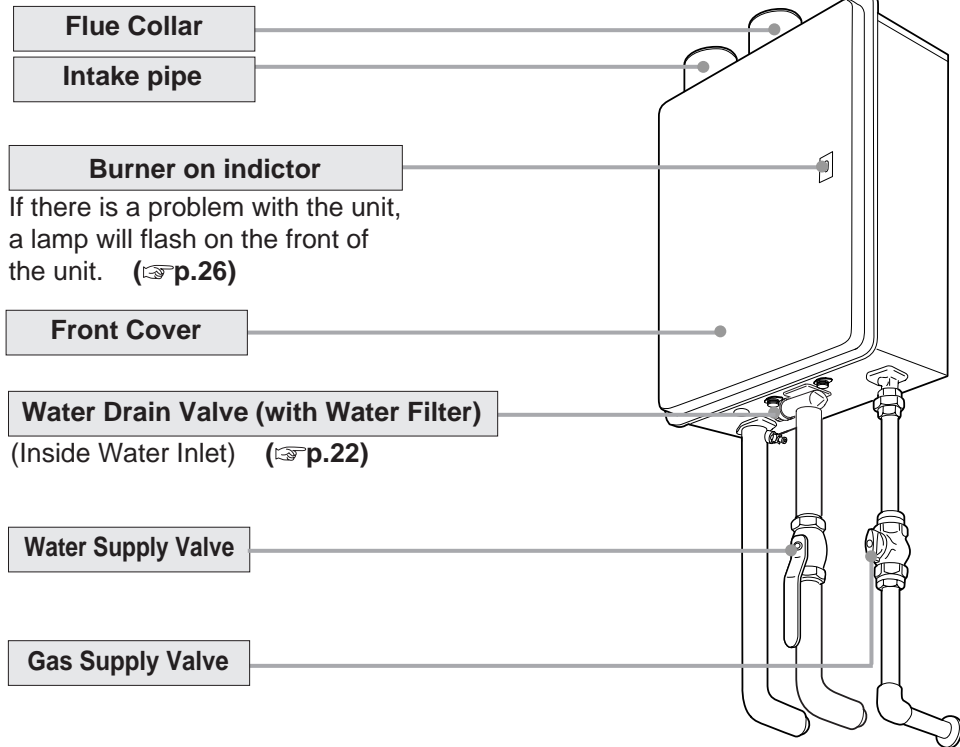


External Wall Mounted, Power Vent/Sealed Model
WHX56, LWHX56, WHX42, LWHX42

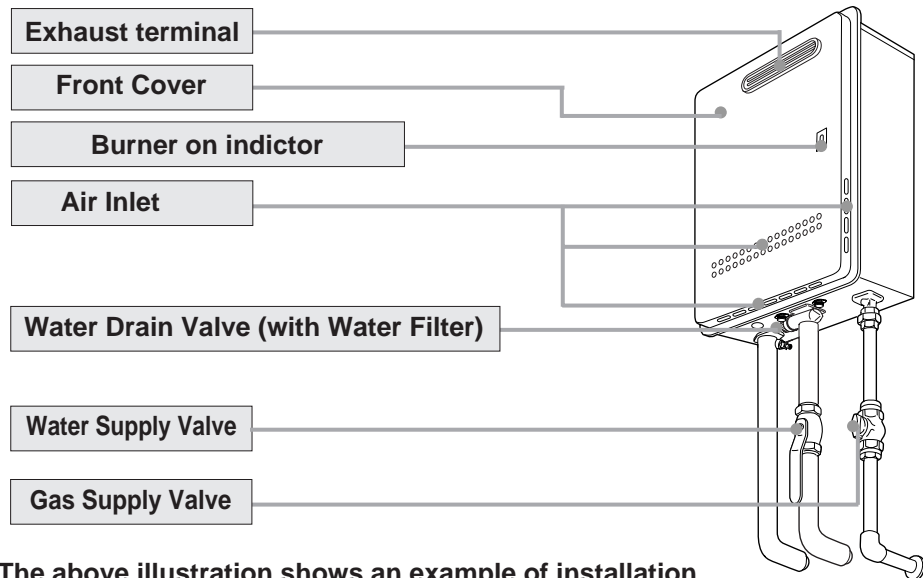

* The above illustration shows an example of installation.
The exact installation configuration may be slightly different.


Names and Functions of Each Parts

Main Remote Controller (RC-7508M)

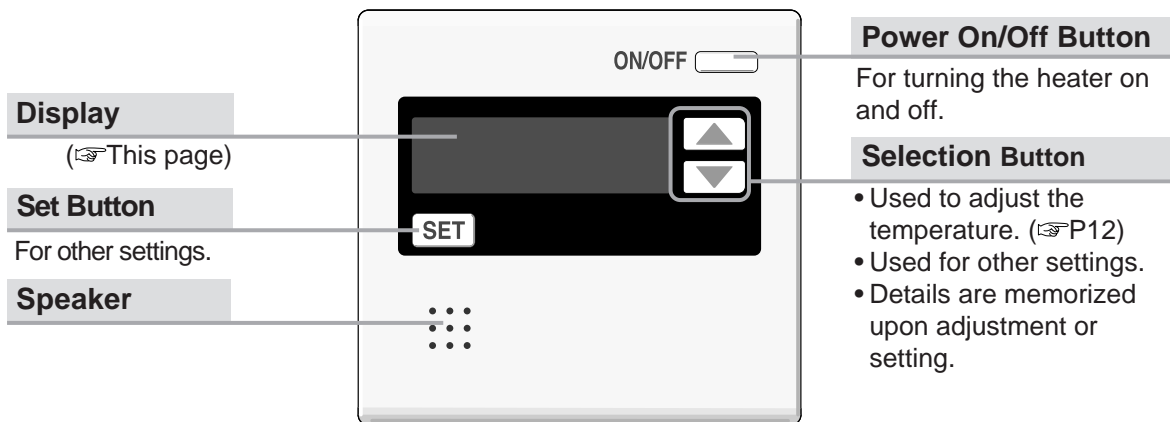

● Display ●

The illustration below shows the remote controller display. What is actually displayed depends on how the water heater is set.

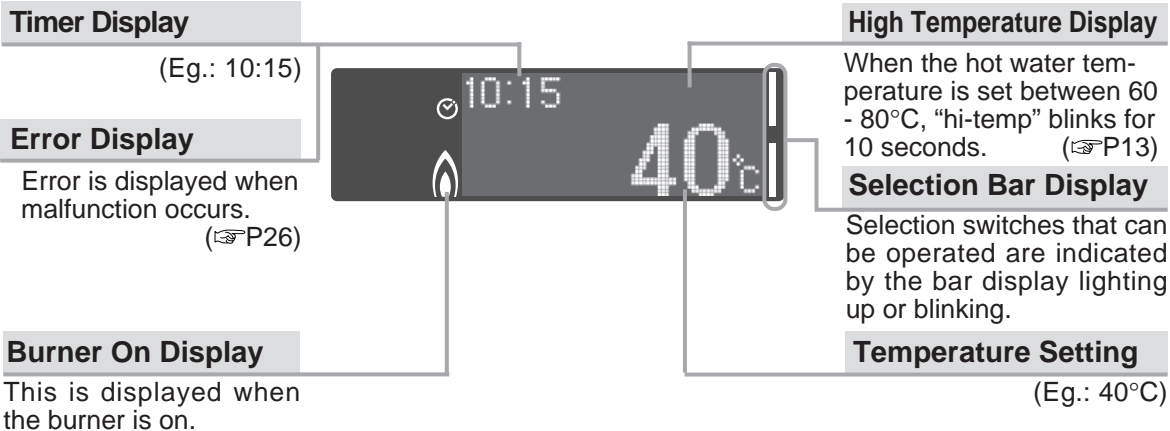

● < Scroll display > to prevent the remote controller screen from burn-in ●

- * In order to prevent the screen burn-in, about 10 minutes after any remote control operation, the screen display begins to scroll sideways.
- * As soon as the remote controller is used again, the scrolling stops.








Current time (when the clock is set), the hot water temperature scrolls sideways.

Initial Operation


Before the first use of your water heater, make the following preparations.



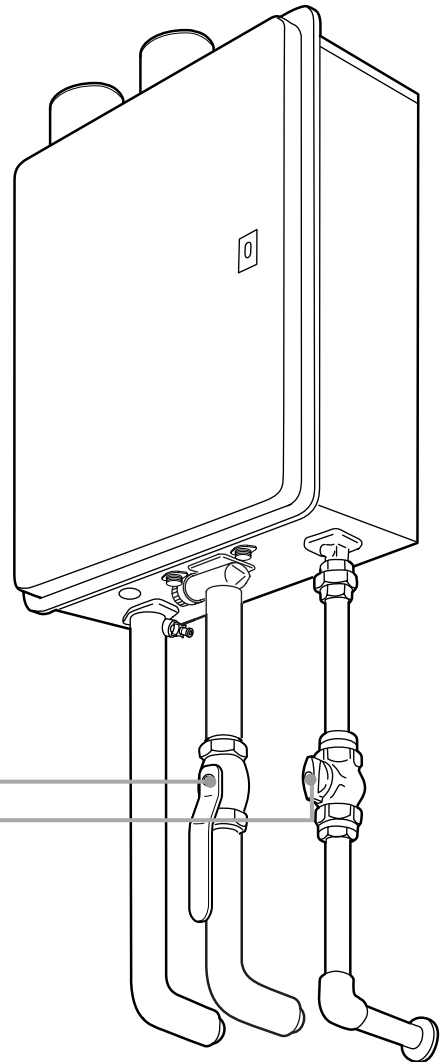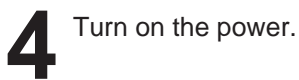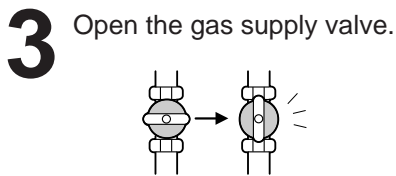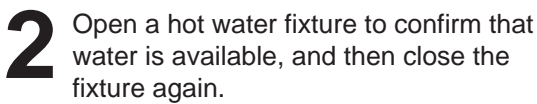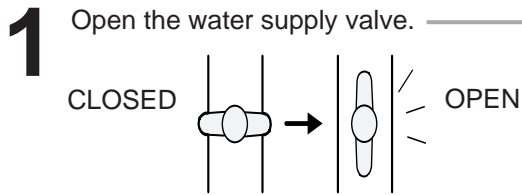



Follow steps **1 through 4**.

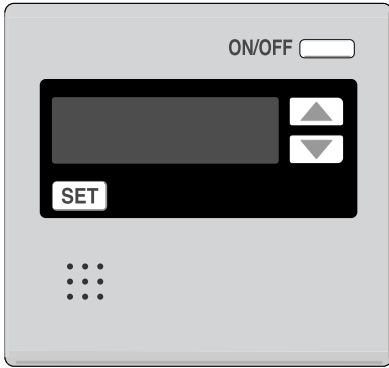

(Ex. WH56)

Clock Adjustment










On this Display	Operation	Description
<p>1</p> 	<p>Press the ON/OFF <input type="checkbox"/> button to turn it "On".</p>	<p>* The ON/OFF <input type="checkbox"/> is lit.</p>
<p>2</p>  <p>(Eg.: 40°C)</p>	<p>Press the SET button to change the display until "time set" is shown.</p>	
<p>3</p> 	<p>Use the   buttons to adjust the clock.</p>	<p>* The time changes in 1-minute increments with each press on the button, and then in 10-minute increments if the button is kept pressed down.</p>
 <p>(Eg.: AM 10:15)</p>	<p>< Completion of setting ></p>	<p>* When the SET button is pressed, or the console is left untouched for about 20 seconds, the settings screen ends.</p>



In the event of a power cut or after disconnecting the power supply, when the power is restored, the clock on the display screen shows "0:00", so the clock needs to be re-set.

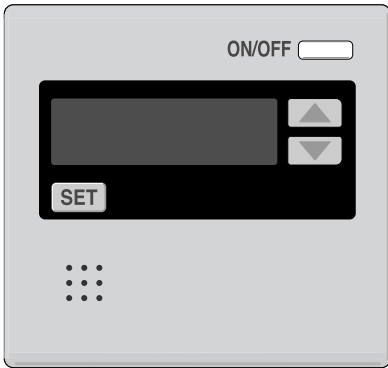Running Hot Water

 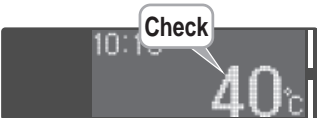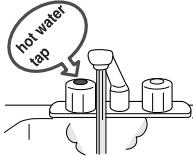

On this Display	Operation	Description
<p>1</p> 	<p>Press the ON/OFF  button to turn it "On".</p>	<p>* The ON/OFF  is lit.</p>
<p>2</p>  <p>Previous set temperature (Eg.: 40°C)</p>	<p>Turn on hot water.</p> 	<p>* This is lit during combustion.</p>  <p>(Display example)</p>



WARNING



Whenever using the hot water, such as when using the shower, check the temperature shown on the remote controller first, and then test the hot water temperature by hand.

Be especially careful if using hot water after previously using water at 60°C or above to prevent scalding.




WARNING







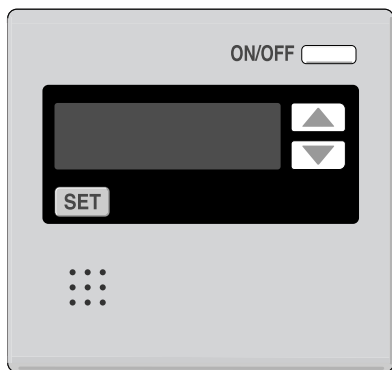

While the shower is being used, no one other than the user should change the temperature, the power switch must not be turned "off". (when using sub remote controller.)

This is to prevent scalding if the temperature rises. Conversely, if the temperature drops or the power switch is turned "off", the user may be upset when the water suddenly becomes much colder.

Setting Hot Water Temperature



On this Display	Operation	Description
1 	Press the ON/OFF  button to turn it "On".	* The ON/OFF  is lit.
2  (Eg.: 40°C)	Use the   buttons to adjust the temperature.	



WARNING



While the shower is being used, no one other than the user should change the temperature, the power switch must not be turned "off". (when using sub remote controller.)

This is to prevent scalding if the temperature rises. Conversely, if the temperature drops or the power switch is turned "off", the user may be upset when the water suddenly becomes much colder.

● Approximate hot water conditions ●

															(°C)			
37	38	39	40	41	42	43	44	45	46	47	48	50	55	60	65	70	75	80
Washing dishes, etc.		Shower, hot water supply, etc.					Hot water supply, etc.					High temperature						

- Hot water temperatures are approximations, and may differ from actual temperatures depending on external factors, such as the season and length of piping involved.
- When low temperatures are set (for washing dishes, etc.), if the ambient water temperature is already quite high, it may be difficult to ensure the resultant water temperature is as per the setting.
- When the hot water temperature is adjusted using thermostat-controlled water mixing valves, set the temperature on the remote controller to about 10°C higher than that required to ensure the appropriate temperature.

● When setting high temperatures (60 - 80°C); ●


- When a high temperature is set, the readout on the right is shown.
- Please check the temperature displayed before using any hot water.
Be especially careful using any hot water after any previous setting of between 60 - 80°C.


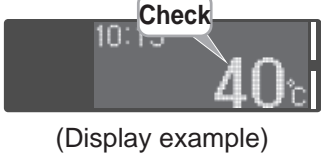
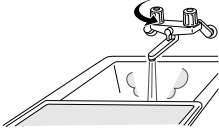

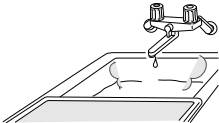




(Eg.: 60°C)

Temperature display flashes for about 10 seconds to indicate high temperature.

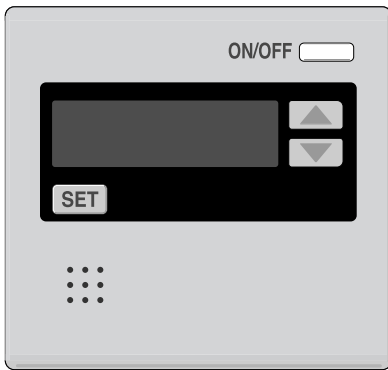
Filling Up the Bath



On this Display	Operation	Description
Preparation Insert the bathplug into the plughole.		
1 	Press the ON/OFF <input type="checkbox"/> button to turn it “On”.	* The ON/OFF <input type="checkbox"/> is lit.
2  (Display example)	Turn on hot water. 	* Please set to the highest temperature when using thermostat controlled water mixing valves. 
3 When the bath is full, turn off the taps.		

 WARNING		Check the bathwater temperature with your hand before getting into the bath.
To prevent scalding.		

Confirmation Beeper On/Off

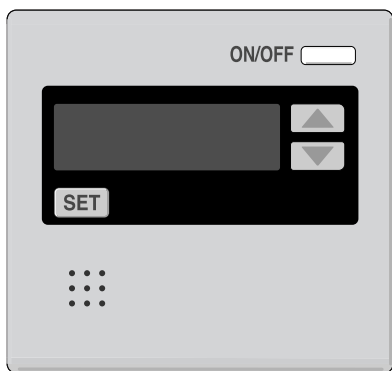


The remote controller will emit a sound when any button is pushed. This sound can be muted if it is desired.

* Initial factory setting is with sound.

Operation	Description
1 Press the ON/OFF <input type="checkbox"/> button for about five seconds. < Completion of setting >	* Setting is possible regardless of whether the power switch is ON/OFF.

Other Setting Options

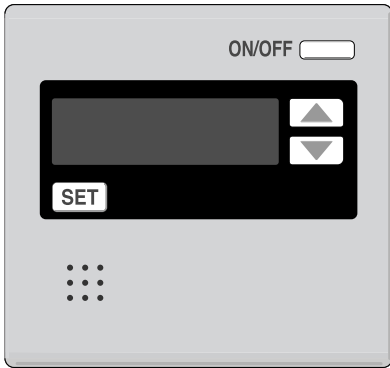

Switching scroll display

Scroll display (P8) can be switched on = "yes" or off = "no".

Draining the unit

This is set to drain the unit.

On this Display

1



2

[Scroll display]
(P8)

scroll display	yes
	no

[Draining the unit]
(P19)

drain the heater	yes
	no

[Maximum temperature setting]
(P13)


max temp.	80°C
-----------	------

3

yes
Scroll display is turned on.
no
Scroll display is turned off.

yes
Condition is suitable for draining the unit. (P19)
no
Stops draining the unit.

80°C
75°C
▪ (in 5°C increments)
50°C
48°C
▪ (in 1°C increments)
40°C

 = Initial setting < factory setting >

Modification of the maximum temperature setting

The maximum temperature setting can be modified.

On this Display

Operation

* This may not be displayed depending on the installation conditions.

system yes
diagnosis

Power is switched "Off" again.

* This is only used for installation and maintenance purposes, so please do not touch.

- ① Press the ON/OFF button to "OFF".
- ② Press the button to show the settings screen.

Press the button to select the setting to be modified.

(Setting changes each time the button is pressed.)



Use the buttons to modify the setting.

(Setting changes each time the button is pressed.)

< Completion of setting >

* When the button is pressed, or the console is left untouched for about 20 seconds, the settings screen ends.

* Repeat procedures 2 - 3 again to adjust other settings.

Preventing Damage from Freezing

The heater and piping can be damaged if cold temperatures cause water to freeze inside the unit. The damage can be prevented with the following method:

Normal cold [outside temperatures between 0°C - 10°C with no wind]

At these temperatures, the units have freeze prevention heaters that will prevent freezing.

- * **Do not disconnect the power. The freeze prevention heaters will not work if the power is disconnected.**
- * The freeze prevention will work regardless of whether the operation button on the remote controller has been turned on.


When the temperature drops, the **freeze-prevention heaters** are automatically activated to keep the unit warm and prevent it from freezing.

The freeze prevention heaters will not prevent the plumbing external to the unit from freezing. Protect this plumbing with insulation. If you are still worried that your heater will freeze, contact the nearest Andrews Water Heaters agent.

For severely cold temperatures [outside temperature including wind chill of less than -10°C]

Run water to prevent freezing.

1. Turn the unit on with the Power Button on the Remote Controller.
2. Close the gas supply valve.
3. Open a hot water fixture and let it run for approx. 1 minute, and then check that the number 11 or F11 is flashing on the remote controller display.
 - * If multiple units are being used, drain each unit for approx. 1 minute.
 - * It is possible that a different number may be displayed on the remote controller, but as long as it is flashing, you may continue.
4. Adjust a hot water fixture, and keep a small amount of hot water running. (0.4L/minute or about 4mm thick.)
 - * If there is a mixing valve, set it to the highest level.
 - * When linking multiple units, discharge water equivalent to 0.4L/minute per unit.
5. The flow may become unstable from time to time. Check the flow 30 minutes later.

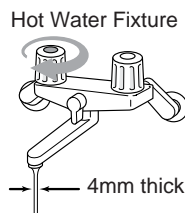

- This method can be applied not only to the heater, but also to the water supply, water piping and mixing valve.
- Remember that if the mixing valve is set to the maximum level, there is a risk of scalding.
- If freezing still might occur, drain the water from the unit following the steps on P19.

If water will not flow because it is frozen

1. Close the gas and water valves.
2. Turn off the operation button.
3. Open the water supply valve from time to time to check whether water is running.
4. When the water is flowing again, check for water leaks from the equipment and piping, or follow steps 1 through 4 on P9 ("Initial Operation").

- If the heater or the piping is frozen, do not use the heater, or it may become damaged.
- Repairs for damage caused by freezing, is not covered by the warranty.

When Unused for an Extended Period-1

If the water heater will not be used for a long period of time, drain the water.

CAUTION



Whenever the unit is checked, maintained, or drained, the power switch must be turned "Off", and it must be allowed to cool down first.


To prevent scalding.

The water within the appliance is still very hot, for a short period after use.


Preparation A bucket for draining water.

Drainage using the remote controller RC-7508M


- Follow the procedure on Pgs. 16 - 17, and set "Drain the heater" to "yes".

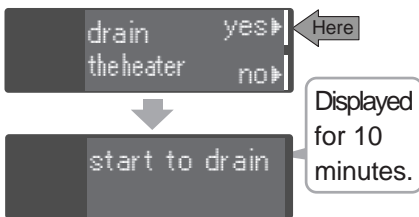

- Close the water supply valve.

 


- Fully open all hot water fixtures.

 

- Open all cleanout plugs by turning them to the left.
(Position of the cleanout plugs → P20)
* Draining starts.


- When the water is completely drained, replace all drain plugs and close the hot water fixtures.

- Close the gas valve.

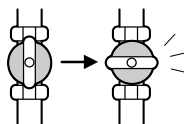


Manual draining


- Close the gas valve.

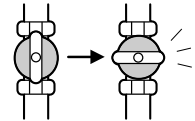

 
- Turn the power switch "On".
(If there is no remote controller, make sure that the power is plugged in.)
 - Open the hot water tap fully, leave it in that position for at least one minute, and then turn off the tap.
* For conjunct setting: Allow at least one minute per unit
* Error display <11> may appear on the remote controller, but this is not an error. Do not turn the power switch "Off".



- Close the water supply valve.

 

- Fully open all hot water fixtures.

 

- Open all cleanout plugs by turning them to the left.
(Position of the cleanout plugs → P20)
* Draining starts.

- When the water is completely drained, replace all drain plugs and close the hot water fixtures.


(Continued)

When Unused for an Extended Period-2


If the water heater will not be used for a long period of time, drain the water.

Position of the cleanout plugs

3 positions

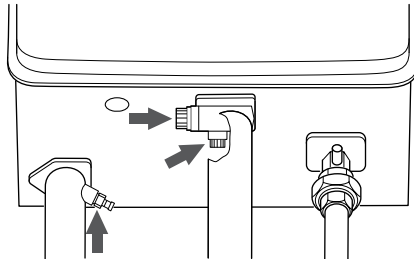

- * The shapes of the cleanout plugs are as pictured on the right.
- * The cleanout plugs may not be clearly visible as they are partially hidden behind the pipe insulation.
- * Water may not drain out fully even though the cleanout plugs are loosened, depending on the pipe arrangement. In this case, fully remove the cleanout plugs. (Make sure not to mislay them.)

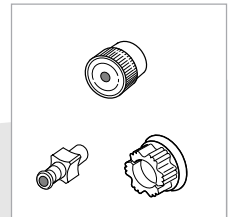

● For re-use ●

Please start to use it again in accordance with the "Initial Operation" procedure on P9.

Regular Maintenance-1

Inspection (Once a month)




Caution



High Temperature

To avoid burns, wait until the equipment cools down before draining the water. The appliance will remain hot after it is turned off.

[Internal installation]

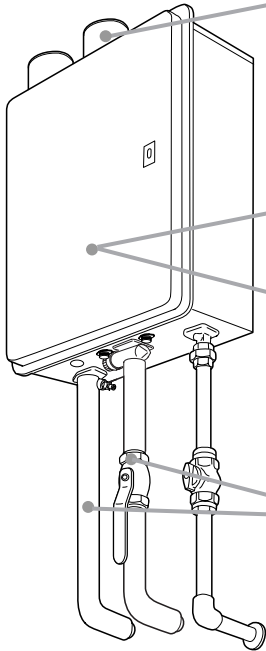

(Ex. WH56)

Check For dust and soot in the flue terminal.

Check For dust and soot in the exhaust terminal.

Check For abnormal sounds during operation.


Check For abnormalities in external appearance, discoloration or flaws.

Check For dust in the air inlet.

Check For water leaks from the equipment and piping.

Check For laundry, newspaper, timber, oil, spray cans and other combustible materials. (→P4)

[External installation]

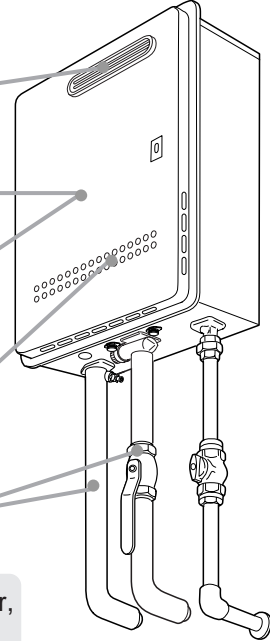

(Ex. WHX56)

Maintenance (Once a month)

Equipment

The boiler casing can be cleaned using a mild liquid detergent with a damp cloth, then a dry cloth to polish.

Do not use any form of abrasive or solvent cleaner as you may damage the paintwork.

Remote Controller

Wipe the surface with a wet cloth.

- Do not use petrol, oil or fatty detergents to clean the remote controller; deformation may occur.
- The remote controller is water resistant but not water proof. Keep it is dry as possible.

Regular Maintenance-2

Maintenance (Once a month)

Water Drain Valve (with Water Filter)


If the water drain valve (with water filter) is covered with debris, the hot water may not run smoothly, or the unit may produce cold water. Check and clean the filter as explained below.

* **To avoid burns, wait until the equipment cools down before draining the water.**

The appliance will remain hot after it is turned off.

* Water will be discharged from the trap plug. Place a container, etc. to receive the discharged water.

1. Close the water supply valve.
2. Open all hot water fixtures.
3. Remove the inlet and outlet drain plugs (about 1L will drain out)
4. Take the water drain valve (with water filter) out of the inlet. (See illustration to right).
5. Clean the water drain valve (with water filter) with a brush under running water.
6. Replace the water drain valve (with water filter). (Take care not to lose the packing.)
7. Close all hot water fixtures.
8. Open the water supply valve and check that water does not leak from the drain plugs or water drain valve (with water filter).

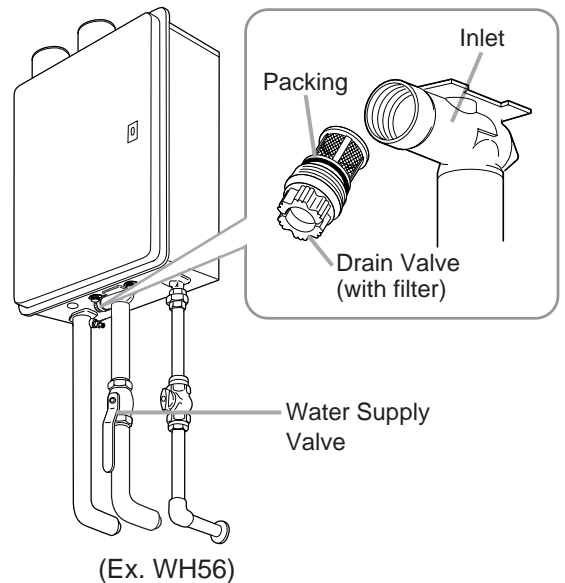

Troubleshooting-1

Temperature

Hot water is not available when the hot water fixture is opened.	<ul style="list-style-type: none">• Are the gas and water supply valves fully open?• Is the water supply cut off?• Is the hot water fixture sufficiently open?• Is the heater frozen?• Is the gas meter working?• (For LP) Is there enough gas in the tank?• Is the operation button turned on?• Have you allowed enough time for the cold water in the pipes to drain out?
Hot water is not available at low temperatures.	<ul style="list-style-type: none">• Are the gas and water supply valves fully open?• Is the water temperature setting appropriate, check remote controller?• If the supply water is at a high temperature, you may need to increase the flow rate through the heater to get a low temperature out of it.
Hot water is not available at high temperatures.	<ul style="list-style-type: none">• Are the gas and water supply valves fully open?• Is the water temperature setting appropriate, check remote controller?
Cold water comes out when the fixture is barely opened. Only cold water is available at low flow rates.	<ul style="list-style-type: none">• The heater stops burning when the flow of hot water becomes less than 2.5 LPM. Open the hot water fixture more, and the water temperature will stabilize.

Troubleshooting-2

Amount of hot water

The pressure at a certain fixture is not constant.

- When hot water is demanded at other fixtures, the amount available may be reduced.
- Pressure fluctuations and other plumbing conditions can cause the temperature and pressure at a fixture to be unstable, but it should stabilize after a short time.
- To keep the temperature stable, the heater limits the amount of water that can flow through it to a small amount initially, but the amount increases over time.

Remote controller

The power lamp is not lit.

- Has the power been cut?

Clock shows "0:00".

- If the power is disconnected for any reason, when the power is reconnected, the clock on the display screen shows "0:00", indicating that it needs to be reset. (☞P10)

After the power is cut, the hot water supply temperature is different.

- The hot water temperature display reverts to the factory setting, so please check it.

The display on the remote controller moves continuously.

- In order to prevent the screen from burn-in, after the remote controller has not been used for about 10 minutes, the screen display changes, and continuously scrolls sideways. (☞P8,16-17)

Temperature setting cannot be increased.

- Has the maximum temperature setting been changed? (☞P16-17)

Sound

The fan can be heard after operation is stopped.

- The fan runs for a while to accelerate ignition after the operation button is turned on.

Other

The Heater stops burning during operation.

- Are the gas and water supply valves fully open?
- Is the water supply cut off?
- Is the hot water fixture sufficiently open?
- Is the gas meter working?
- (For LP) Is there enough gas in the tank?

White smoke comes out of the exhaust vent on a cold day.

- This is normal on cold days.

The hot water becomes turbid.

- This is harmless. Small bubbles appear as the air in the water is heated and depressurized rapidly to atmospheric pressure. It is similar to the bubbles in beer or carbonated beverages.

Water leaks from the drain plugs on the outlet.

- When the main unit is highly pressurized, water will leak from the drain plugs as a safety so that the unit is not damaged by the high pressure.
- These plugs are pressure relief valves. If water is leaking out of them, excessive pressure is being supplied to the unit: Have the water pressure checked by your installer.

Troubleshooting-3

Please check the failure display on the remote controller or the combustion lamp on the main body.

In the event of a failure, the cause is notified by a blinking failure display. Please resolve the problem in accordance with the table below.




Failure display blinks

(This display is an example.)

Failure display	Details of Failure	Remedy
11 F11	Fault occurs with the ignition switch at the hot water supply side.	Turn the power "Off", make sure that the gas valve is open and that the gas meter has not shut off the gas, and if this is the problem, please rectify it. Then, turn the power "On", and when the hot water tap is turned on, it is back to normal if nothing is displayed.
99 F99	Fault occurs with combustion of the unit.	Please contact Andrews Water Heaters.

[Combustion lamp is lit. (P7)]

In the event of a failure, you are notified by the combustion lamp blinking at the front of the unit. Please resolve the problem in accordance with the table below.

Combustion lamp	Details of Failure	Remedy
Continuously blinking Lit Unlit 	<ul style="list-style-type: none"> Fault occurs with the unit. 	Make sure that the gas valve is open. Close the hot water tap, then reopen it, and it is back to normal if the combustion lamp is no longer lit.

Contact our Technical Department if:

- Any other error code appears.
- An error code is indicated again after the above actions were followed.
- There are any other questions.

Follow-up Service

Requesting Service

First follow the instructions in the troubleshooting section (P23 to P26).
If the error is not corrected, contact Andrews Water Heaters.

We will need to know:

The Model (check the rating plate)

Date of purchase (see the warranty)

Details of problem ... (flashing error codes,
etc., in as much detail as possible)

Your name, address, and telephone number



* A request for service may be rejected if the water heater is installed in a location where working on the unit may be dangerous. Contact a plumber.

Warranty

Be sure that the warranty card is returned and includes, date of installation/commissioning, site address and other necessary items as shown.

Read the content carefully, and keep in a safe place.

For repairs after the warranty period, please contact your local Maintenance company.

Minimum period of time for stocking repair parts

Andrews Water Heaters will stock repair parts for this unit for a minimum of ten years after production has ceased.

These are the parts necessary to repair or maintain this unit.

Specifications-1

- Specifications may be changed without prior notice.
- The capacity may differ slightly, depending on the water pressure, water supply, piping conditions, and water temperature.

Specifications

Item		Specification	
Model Name		WH56	LWH56
Type	Installation Air Supply/Exhaust	Internal, Wall Mounted Power Vented	
Ignition		Direct Ignition	
Minimum Pressure for Maximum flow		2.0 bar	
Minimum Flow Rate		2.5 L/min.	
Dimensions		61.5 cm(Height) x 46.4 cm(Width) x 24 cm(Depth)	
Weight		29 kg	
Water Holding Capacity		1.1 Litre	
Connection Sizes	Water Inlet	3/4"	
	Hot Water Outlet	3/4"	
	Gas Inlet	3/4"	
Power Supply	Supply	230V AC (50Hz)	
	Consumption	120W	112W
		Freeze Prevention 115W	
Materials	Casing	Zincified Steel Plate/Polyester Coating	
	Flue Collar	Stainless Steel	
	Heat Exchanger	Copper Sheetting, Copper Tubing	
Safety Devices		Flame Rod, Thermal Fuse, Pressure Relief Valve, Lightning Protection Device (ZNR), Electric Leakage Prevention Device, Overheat Prevention Device, Freezing Prevention Device, Fan Rotation Detector	
Accessories		Remote Controller, Anchoring Screws	

Performance

Item		Maximum Performance	Minimum Performance
Gas Consumption (NET)	I _{2H}	62.3 kW	5.0 kW
	I _{3P}	62.3 kW	5.0 kW
Hot Water Capacity	25°C Rise	32 L/min.	
	58°C Rise	13 L/min.	
Capacity Range		2.5 - 32 L/min.	
Temperature Settings		37 - 48, 50, 55, 60, 65, 70, 75, 80°C	

Specifications

Item		Specification	
Model Name		WHX56	LWHX56
Type	Installation Air Supply/Exhaust	External, Wall Mounted Power Vented	
Ignition		Direct Ignition	
Minimum Pressure for Maximum flow		2.0 bar	
Minimum Flow Rate		2.5 L/min.	
Dimensions		61.5 cm(Height) x 46.4 cm(Width) x 24 cm(Depth)	
Weight		30 kg	
Water Holding Capacity		1.1 Litre	
Connection Sizes	Water Inlet	3/4"	
	Hot Water Outlet	3/4"	
	Gas Inlet	3/4"	
Power Supply	Supply	230V AC (50Hz)	
	Consumption	83W	
		Freeze Prevention 115W	
Materials	Casing	Zincified Steel Plate/Polyester Coating	
	Flue Collar	Stainless Steel	
	Heat Exchanger	Copper Sheeting, Copper Tubing	
Safety Devices		Flame Rod, Thermal Fuse, Pressure Relief Valve, Lightning Protection Device (ZNR), Electric Leakage Prevention Device, Overheat Prevention Device, Freezing Prevention Device, Fan Rotation Detector	
Accessories		Remote Controller, Anchoring Screws	

Performance

Item		Maximum Performance	Minimum Performance
Gas Consumption (NET)	I _{2H}	62.3 kW	5.0 kW
	I _{3P}	62.3 kW	5.0 kW
Hot Water Capacity	25°C Rise	32 L/min.	
	58°C Rise	13 L/min.	
Capacity Range		2.5 - 32 L/min.	
Temperature Settings		37 - 48, 50, 55, 60, 65, 70, 75, 80°C	

Specifications-2

- Specifications may be changed without prior notice.
- The capacity may differ slightly, depending on the water pressure, water supply, piping conditions, and water temperature.

Specifications

Item		Specification	
Model Name		WH42	LWH42
Type	Installation Air Supply/Exhaust	Internal, Wall Mounted Power Vented	
Ignition		Direct Ignition	
Minimum Pressure for Maximum flow		2.0 bar	
Minimum Flow Rate		2.5 L/min.	
Dimensions		61.5 cm(Height) x 46.4 cm(Width) x 24 cm(Depth)	
Weight		29 kg	
Water Holding Capacity		1.1 Litre	
Connection Sizes	Water Inlet	3/4"	
	Hot Water Outlet	3/4"	
	Gas Inlet	3/4"	
Power Supply	Supply	230V AC (50Hz)	
	Consumption	89W	85W
		Freeze Prevention 115W	
Materials	Casing	Zincified Steel Plate/Polyester Coating	
	Flue Collar	Stainless Steel	
	Heat Exchanger	Copper Sheeting, Copper Tubing	
Safety Devices		Flame Rod, Thermal Fuse, Pressure Relief Valve, Lightning Protection Device (ZNR), Electric Leakage Prevention Device, Overheat Prevention Device, Freezing Prevention Device, Fan Rotation Detector	
Accessories		Remote Controller, Anchoring Screws	

Performance

Item		Maximum Performance	Minimum Performance
Gas Consumption (NET)	I _{2H}	49.0 kW	5.0 kW
	I _{3P}	49.0 kW	5.0 kW
Hot Water Capacity	25°C Rise	24 L/min.	
	58°C Rise	10 L/min.	
Capacity Range		2.5 - 24 L/min.	
Temperature Settings		37 - 48, 50, 55, 60, 65, 70, 75, 80°C	

Specifications

Item		Specification	
Model Name		WHX42	LWHX42
Type	Installation Air Supply/Exhaust	External, Wall Mounted Power Vented	
Ignition		Direct Ignition	
Minimum Pressure for Maximum flow		2.0 bar	
Minimum Flow Rate		2.5 L/min.	
Dimensions		61.5 cm(Height) x 46.4 cm(Width) x 24 cm(Depth)	
Weight		30 kg	
Water Holding Capacity		1.1 Litre	
Connection Sizes	Water Inlet	3/4"	
	Hot Water Outlet	3/4"	
	Gas Inlet	3/4"	
Power Supply	Supply	230V AC (50Hz)	
	Consumption	67W	66W
		Freeze Prevention 115W	
Materials	Casing	Zincified Steel Plate/Polyester Coating	
	Flue Collar	Stainless Steel	
	Heat Exchanger	Copper Sheeting, Copper Tubing	
Safety Devices		Flame Rod, Thermal Fuse, Pressure Relief Valve, Lightning Protection Device (ZNR), Electric Leakage Prevention Device, Overheat Prevention Device, Freezing Prevention Device, Fan Rotation Detector	
Accessories		Remote Controller, Anchoring Screws	

Performance

Item		Maximum Performance	Minimum Performance
Gas Consumption (NET)	I _{2H}	49.0 kW	5.0 kW
	I _{3P}	49.0 kW	5.0 kW
Hot Water Capacity	25°C Rise	24 L/min.	
	58°C Rise	10 L/min.	
Capacity Range		2.5 - 24 L/min.	
Temperature Settings		37 - 48, 50, 55, 60, 65, 70, 75, 80°C	

ErP-Information

Product Sheet

Product name		Fastflo WH42	Fastflo WH56	Fastflo LWH42	Fastflo LWH56	Fastflo WHC56	Fastflo LWHC56	Fastflo WHX56	Fastflo LWHX56
Declared load profile		XXL	XXL	XXL	XXL	XXL	XXL	XXL	XXL
Water heating energy efficiency class		B	B	B	B	A	A	B	B
Water heating energy efficiency	%	71	71	71	71	86	87	71	72
Annual energy consumption	kWh ⁽¹⁾	65	65	65	65	74	73	59	61
	GJ ⁽²⁾	27	27	27	27	22	22	27	26
Other load profiles for which the water heater is suitable to use and the corresponding water heating energy efficiency and annual electricity consumption ⁽³⁾		-	-	-	-	-	-	-	-
Thermostat temperature setting	°C	40	40	40	40	40	40	40	40
Sound power level L _{WA} indoors	dB	57	57	57	57	57	57	57	57
Ability to off-peak hours functioning ⁽³⁾		-	-	-	-	-	-	-	-
Enables smart control settings ⁽⁴⁾		-	-	-	-	-	-	-	-
<p>(1) Electricity (2) Fuel (3) If applicable. (4) If smart control settings value is "1", the water heating energy efficiency and annual electricity and fuel consumption only relate to enabled smart control settings.</p>									

Technical parameters

Product name			Fastflo WH42	Fastflo WH56	Fastflo LWH42	Fastflo LWH56	Fastflo WHC56	Fastflo LWHC56	Fastflo WHX56	Fastflo LWHX56
Daily electricity consumption	Q_{elec}	kWh	0.297	0.297	0.33	0.33	0.337	0.33	0.271	0.276
Declared load profile			XXL	XXL	XXL	XXL	XXL	XXL	XXL	XXL
Sound power level, indoors	L_{WA}	dB	57	57	57	57	57	57	57	57
Daily fuel consumption	Q_{fuel}	kWh	30.452	30.452	30.332	30.332	27.73	27.46	33.57	33.01
Emissions of nitrogen oxides	NO_x	mg/kWh	70	70	70	70	52	52	60	60
Weekly fuel consumption with smart controls	$Q_{fuel, week, sm}$	kWh	-	-	-	-	-	-	-	-
Weekly electricity consumption with smart controls	$Q_{elec, week, sm}$	kWh	-	-	-	-	-	-	-	-
Weekly fuel consumption without smart controls	$Q_{fuel, week}$	kWh	213	213	212	212	194	194	235	234
Weekly electricity consumption without smart controls	$Q_{elec, week}$	kWh	2	2	2	2	2	2	2	2



Register now to activate your warranty www.andrewswaterheaters.co.uk/register-a-warranty. Please make sure you attach proof of purchase for your warranty to be monitored.

All descriptions and illustrations provided in this document have been carefully prepared but we reserve the right to make changes and improvements in our products which may affect the accuracy of the information contained in this leaflet. All goods are sold subject to our standard Conditions of Sale which are available on request.

Aug 2016

Customer support
Monday - Friday
8am - 5pm

Tel 0345 070 1057
Fax 0345 070 1059
Email service@baxicommercialdivision.co.uk
Website andrewswaterheaters.co.uk
Twitter @AndrewsWH



CIBSE



INVESTORS IN PEOPLE | Bronze

